

Power Dump Dolly™

Contents:

Introduction	1
Terminology:	1
Steps:	3
Step 1: Place trash can onto the Power Dump Dolly™	3
Step 2: Place the Power Dump Dolly onto the dumpster	3
Step 3: Lift trash into the dumpster	4
Step 4: Return carriage to the floor	4
For more information:	5
MANDATORY SAFETY INFORMATION.....	6

 
Introduction:

This set of instructions focuses on the Power Dump Dolly and the procedure it entails to operate it successfully. It will educate any individual on how to safely empty a trash can, or the equivalent, into a 4 yard, 6 yard, or 8 yard dumpster with a edge height of 53" or less, or onto a trailer. Without the control and safety of a Dump Dolly, serious injury can occur when handling heavy loads above the knees and shoulders. The Power Dump Dolly was **designed** in 2012 by Shay Scott, **founder of Dump Dolly LLC**, to better the health of individuals who manually lift heavy cans of waste in a commercial or non-commercial environment.

Terminology:

- Nose Plate- Metal attached to the bottom of the dolly where can is placed.
- Elastic Cord- Secures can to the dolly and is found on the nose plate.
- Trash Can Clip (anchor)- Adjustable clip that allows can to be attached securely to the entire dolly. Prevents can from falling into dumpster. Not intended to use to pull the trash can and dolly backwards.
- Trash Can Clip Knob- Tightens the trash can clip to secure can. Found behind trash can clip in back of the dolly.

- Dumpster Hooks- Orange/Black hooks attached to the top of the dolly to place on rim of the dumpster.
- Dumpster Latch (vary by models)- Used for 8 yard dumpsters to prevent dolly from falling forward instead of onto the dumpster.

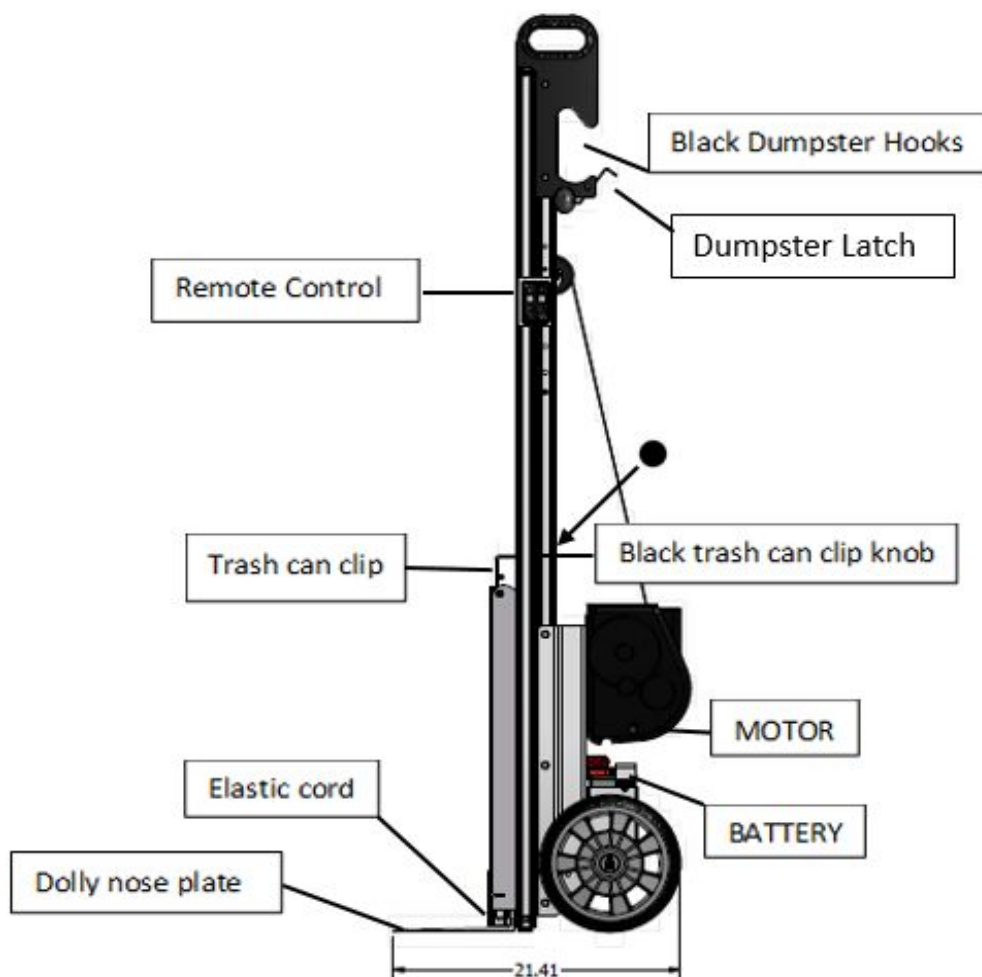

Caution: Misuse of this product may result in injury to individual (watch fingers and toes). Follow all instructions properly.

***Note:**

 
- Do not over tighten Can Clip Knob.
- Keep fingers clear of the side rails when lowering the trash can back down onto the carriage.

Steps:

Step 1: Place can onto the Power Dump Dolly

1. Move nose plate under the can OR place can onto the nose plate.
2. Place the elastic cord around the base of the can.
3. Loosen the trash can clip knob.
4. Lift the trash can clip up, then down and secure to the rim of the can.
5. Tighten the trash can clip knob.

***Note:** Do not over tighten.

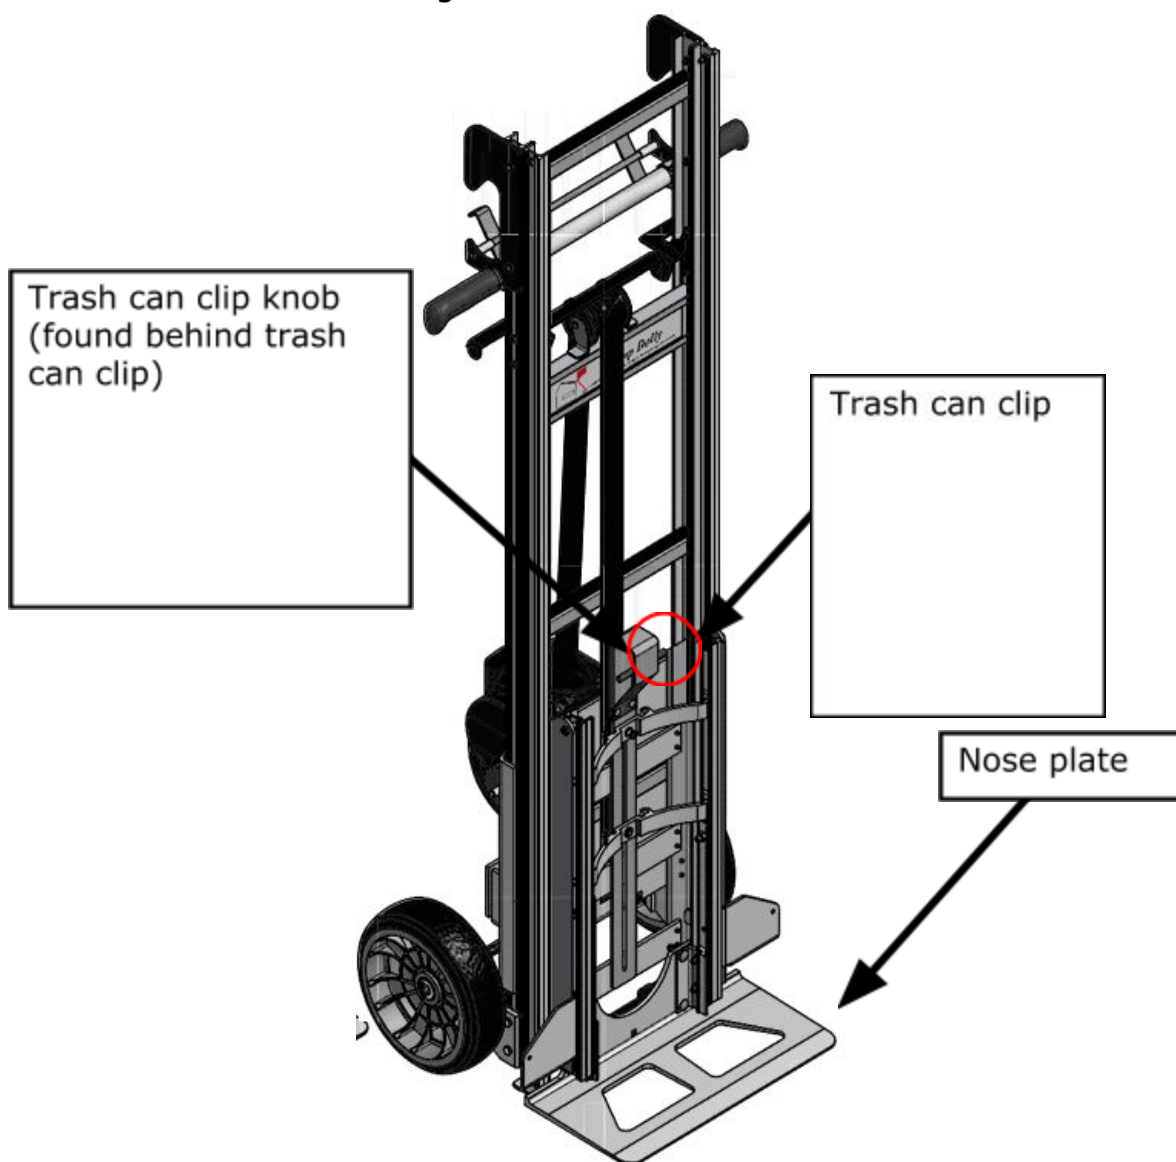

Step 2: Place the Power Dump Dolly onto the dumpster

 
1. While holding the trash can, lean the Dump Dolly backwards onto the leading edge of the dumpster and allow the dumpster latch, located near dumpster hooks, to fall in place against the dumpster lip.

Step 3: Lift trash into the dumpster

1. Press the "IN" button on the stationery button near the handle to raise the carriage. Up motion will automatically stop at the top.
2. Manually lift the attached carriage with container attached, and dump trash into the dumpster.

Step 4: Return carriage to the floor

1. To return can and carriage to the bottom, press the "OUT" button until the carriage is back at the bottom then release button. (see safety note on page 6).
2. Carriage will automatically stop when at the bottom. Release the button. Caution: always return carriage to the bottom before removing from dumpster!
3. **DO NOT OPERATE POWER DOLLY USLESS IT IS LEANING ON THE DUMPSTER AS INTENDED. WHEN OPERATING IN THE UPRIGHT POSITION, INJURY AND DAMAGE TO DUMP DOLLY CAN INCUR.**

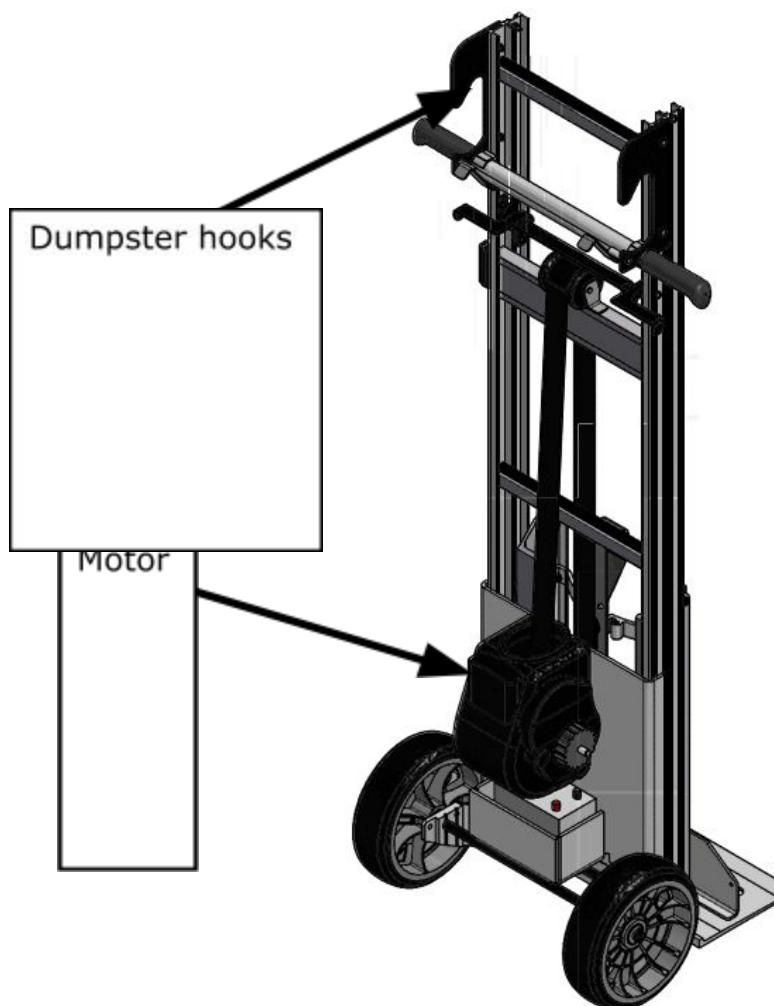

Maintenance

The battery should be charged nightly with the enclosed maintainer/charger. Connect the charging wire on the Dump Dolly to the connecting end of the maintainer/charger. Then just plug in the charger to a 115/120 volt outlet. Indicator lights on the maintainer/charger will let you when charging or charged. A fully charged battery will do the job of operating the motor for many fully loaded lifts. The weight of each load and the frequency of use will determine if the Dump Dolly should be charged more often than once in any 24 hour period.

The four plastic carriage wheels are not self lubricating and may need to be occasionally lubricated with a good quality spray or liquid lubricant. Lubricate only when necessary.

For more information:

For more detailed instructions, go to www.DumpDolly.com or call (325)227-8051 CST 9:00 am-4:00pm Monday through Friday

****Note:** Drawings do not represent the current Power Dolly design but still allow for understanding how it functions.

CAUTION !!!!

**Operate only when leaning on
dumpster**

THE **POWER DUMP DOLLY** HAS SAFETY SWITCHES AT THE TOP AND BOTTOM TO STOP THE SLIDING CARRIAGE WHEN IT REACHES THE LIMITS OF THE TOP AND BOTTOM. WHILE HOLDING DOWN THE BUTTON, SHOULD THE WINCH CONTINUE TO RUN WHEN AT THE BOTTOM CAUSING SLACK IN THE

STRAP, THE WINCH WILL EVENTUALLY BEGIN TO TIGHTEN AGAIN, IN THE OPPOSITE, BUT WRONG DIRECTION. SHOULD THIS OCCUR, IMMEDIATELY STOP PRESSING THE OUT (DOWN) BUTTON AND PRESS THE IN (UP) BUTTON. THIS WILL TEMPORARILY ALLOW SLACK IN THE STRAP UNTIL THE STRAP BECOMES TIGHT AND THE CARRIAGE STARTS GOING UP. RELEASE THE BUTTON AND NORMAL USE CAN NOW RESUME.

FOR MORE INFORMATION, CALL 325-227-8051